


Tremco Water-Stop. Install 50mm
From Outer Face of Wall.

Paraseal Below Floor and Footing

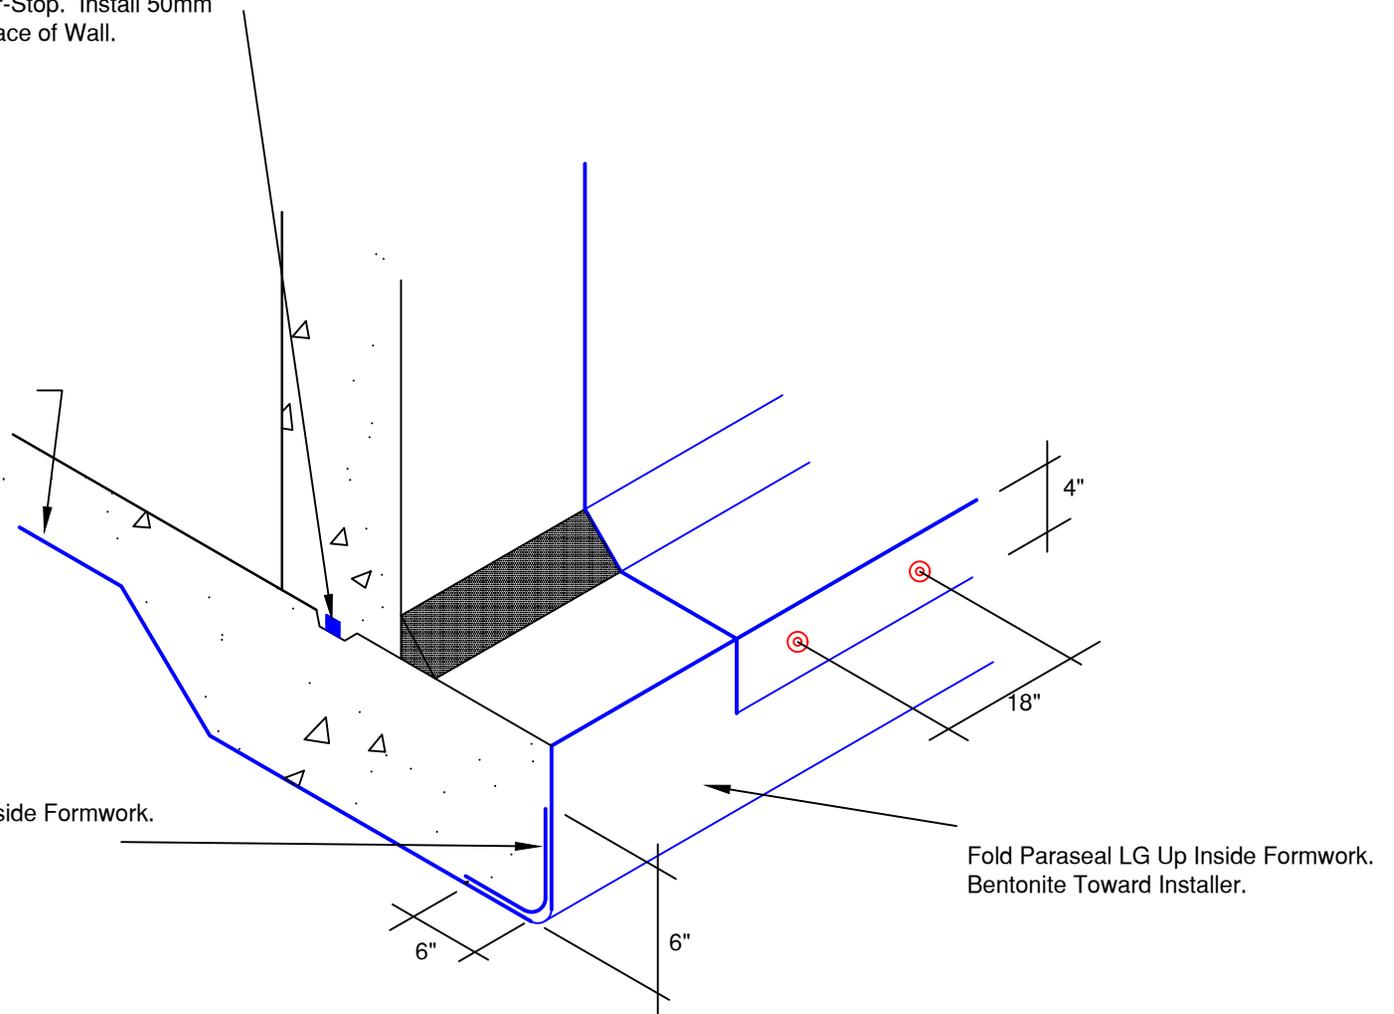

600mm Strip of Paraseal Placed Inside Formwork.
Bentonite Toward Installer.

Fold Paraseal LG Up Inside Formwork.
Bentonite Toward Installer.

Note: Paraseal Products require a
minimum 117 kg/m² compaction/
confinement to be effective.



www.tremco.com.au
12/4 Southridge St, Eastern Creek, NSW 2766
Phone: (02) 9638 2755 Fax: (02) 9638 2955

Project: Paraseal Backfilled Walls

Detail: Tie-In Between Below Floor Paraseal and Wall Paraseal

Sheet Number:

File Name:

PBFW - Tie-In Btw
Below Floor and
Wall Paraseal

Rev #:

01

This detail is intended for conceptual purposes only.

Drawn by: SP

Checked by: XX

Scale: N.T.S

Date: 09/11/2020